

## HP Documentation

HP 9000 Model 340 Owner's Guide

## System Shutdown

Perform an orderly shutdown of the operating system. Reference the Owner's Guide for detailed instructions. Disconnect the system power cable.

## Remove the CPU Card

Remove the cables from the RS-232, speaker, keyboard (HIL), and the HP-IB connectors on the back of the CPU card. These connectors are clearly marked on the metal connector plate at the back of the computer. Remove the seven torx (T-10) screws on the metal connector plate on the back of the system and slide the HP-340 CPU card from the chassis.

## Memory Connectors

The HP 340 CPU card has four memory connectors labeled "RAM1", "RAM2", "RAM3", and "RAM4". These four connectors are located at the front of the CPU card on the side opposite the on/off switch.

## Install Memory

Plug the memory card into the next available connector. The cards must be installed contiguously. The first card must be plugged into "RAM1" connector. The second card must be plugged into "RAM2" connector. Do not leave any free connectors between memory cards.

## Replace the CPU Card

Slide the CPU card back into the chassis. Install the seven screws on the back of the computer that secure the HP 340 CPU card to the chassis. Connect any cables that were removed from the CPU I/O connectors.

## Verify the New System Memory

Power up the system. Verify that the total system memory is correct. Call Newport Digital if you have any questions..

**Newport Digital**