

HP Documentation

HP 9000 Model 362 Owner's Guide

System Shutdown

Perform an orderly shutdown of the operating system. Reference the Owner's Guide for detailed instructions. Disconnect the system power cable.

Remove the Top Cover

Remove the phillips screw holding the top cover to the back panel. Slide the top cover off.

Memory Connectors

The HP 362 CPU card has 2 memory connectors. The memory connectors are labeled "RAM 0 *First RAM*" and "RAM 1 *Second RAM*". If you only have one SIMM card installed it must be in RAM 0. If you have two SIMM cards installed, the larger size card must be in RAM 0 and the smaller size card must be in RAM 1. For example, if you are installing an 8MB card that currently has a single 4MB card in RAM 0. First you must remove the 4MB card. Then you must put the 8MB card in RAM 0 and the 4MB card in RAM 1.

Install Memory

The SIMMs must be installed in the memory socket in the correct orientation. The module has a notch on one end of the contact strip. The socket has a tab at the bottom of the clip on the left end. The notched end of the module must be aligned with the tab in the socket.

Replace the CPU Card

Place the top cover back on the computer. Secure the top to the computer using the phillips screw. Connect any cables that were removed from the CPU I/O connectors. Reconnect the power cord.

Verify the New System Memory

Power up the system. Verify that the total system memory is correct. Call Newport Digital if you have any questions..

Newport Digital